

mazon

HEADBOARD FREE STANDING
HEADBOARD BRACKET MANUAL


Instruction and User Guide

PLEASE READ OUR USER GUIDE
CAREFULLY BEFORE USE

HOW TO ATTACH A FREE STANDING HEADBOARD BRACKET

All Mazon bases come standard with 63mm headboard bolts.

All Mazon Headboards come standard with headboard slots, unless wall mounted is specified.

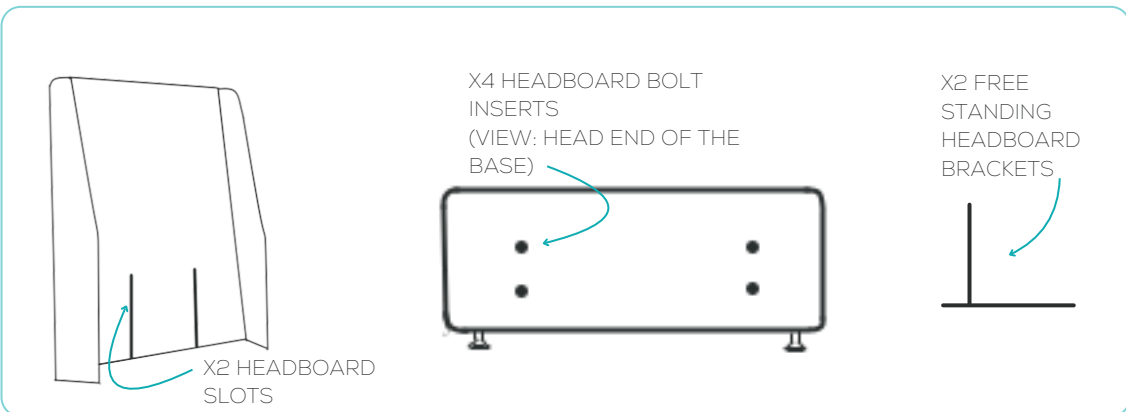

1. Place your headboard on the freestanding bracket.

2. Screw in the headboard bolts.

