

mazon

METRO HIDE-A-BED STEP BY STEP
PHOTOS


Instruction and User Guide

PLEASE READ OUR USER GUIDE
CAREFULLY BEFORE USE

1. Metro boxes required



2. Spring hinge hardware

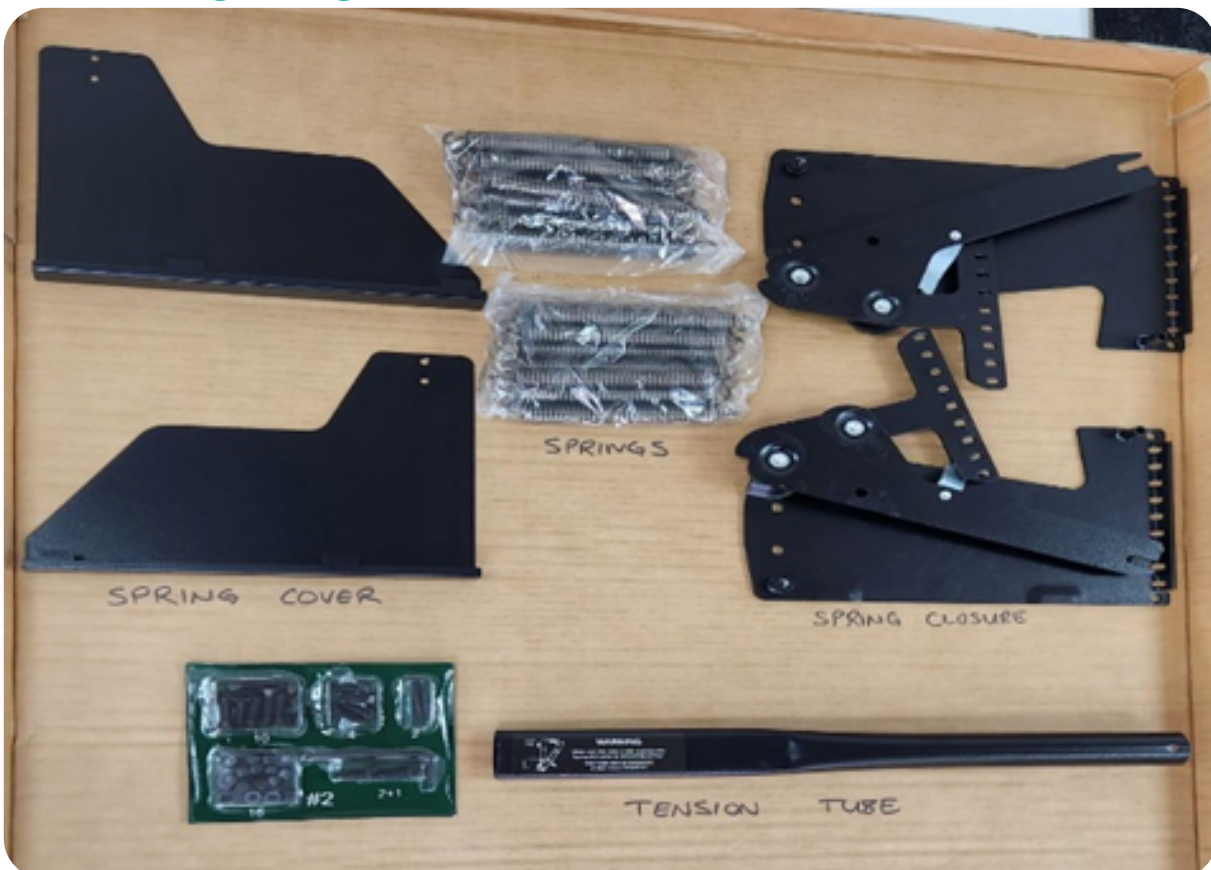

3.


- Handle
- Camlock fittings
- Wall fix brackets



4. Side, top & base Panels with hardware



5. Spring lift mechanism fitted

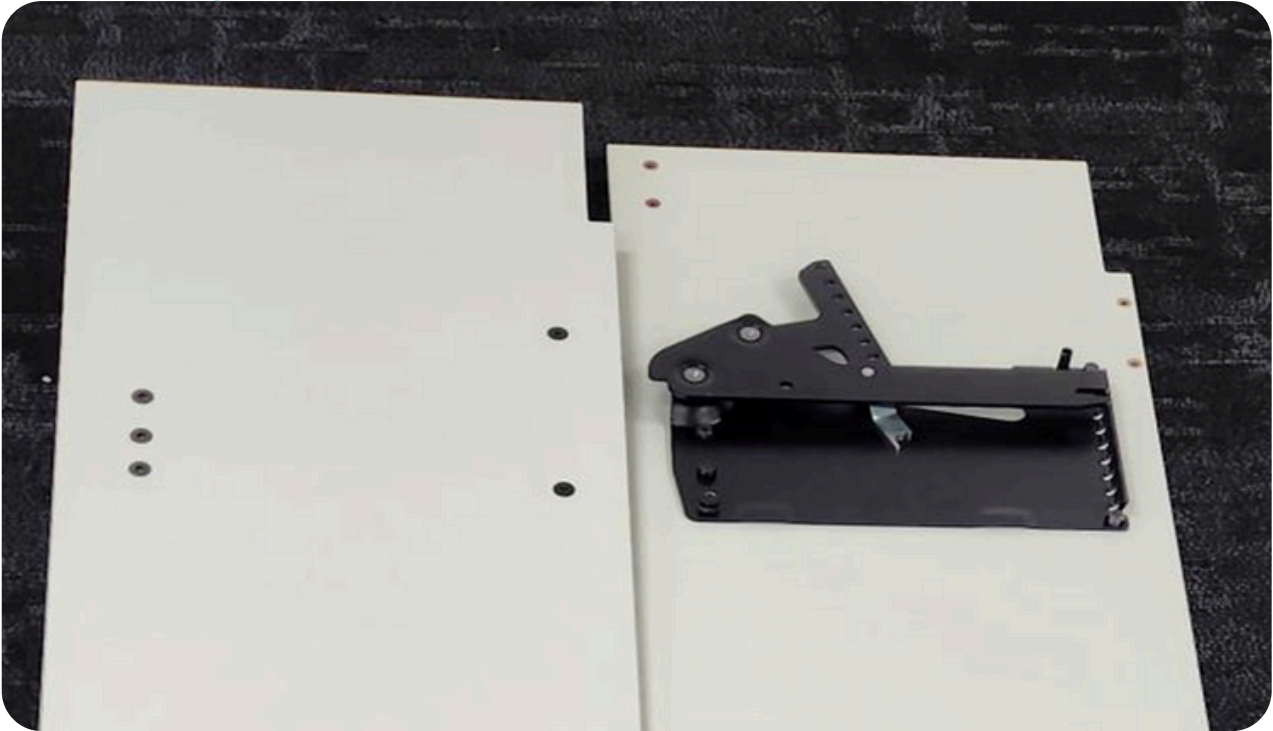

6. Springs fitted



7. Top panel & Facia board ready to join



8. Camlock detail

IMPORTANT DO NOT OVERTIGHTEN CAMLOCK NUTS



9. Panels with all Camlock bolts fitted ready to receive joining panels



10. Carcase assembled. Facia stiffener to be screwed to Facia then stand unit up and fix to wall.





11. Unit fixed to wall studs.



12. Join 2 face panels.

Note position of joining bolts with head protruding into each hole.

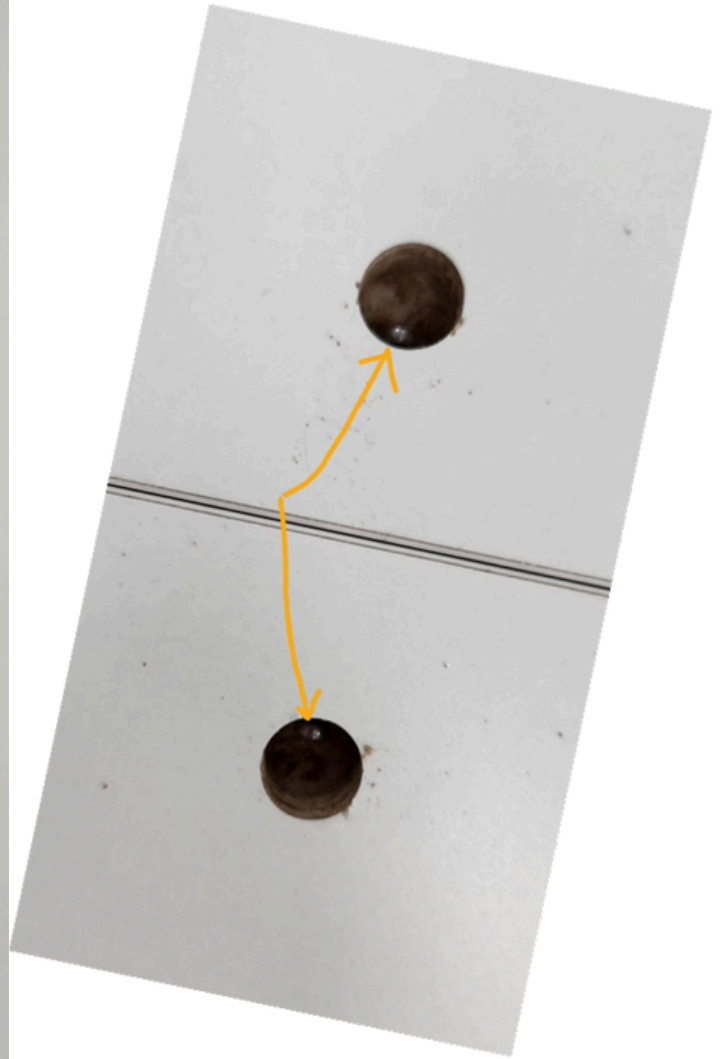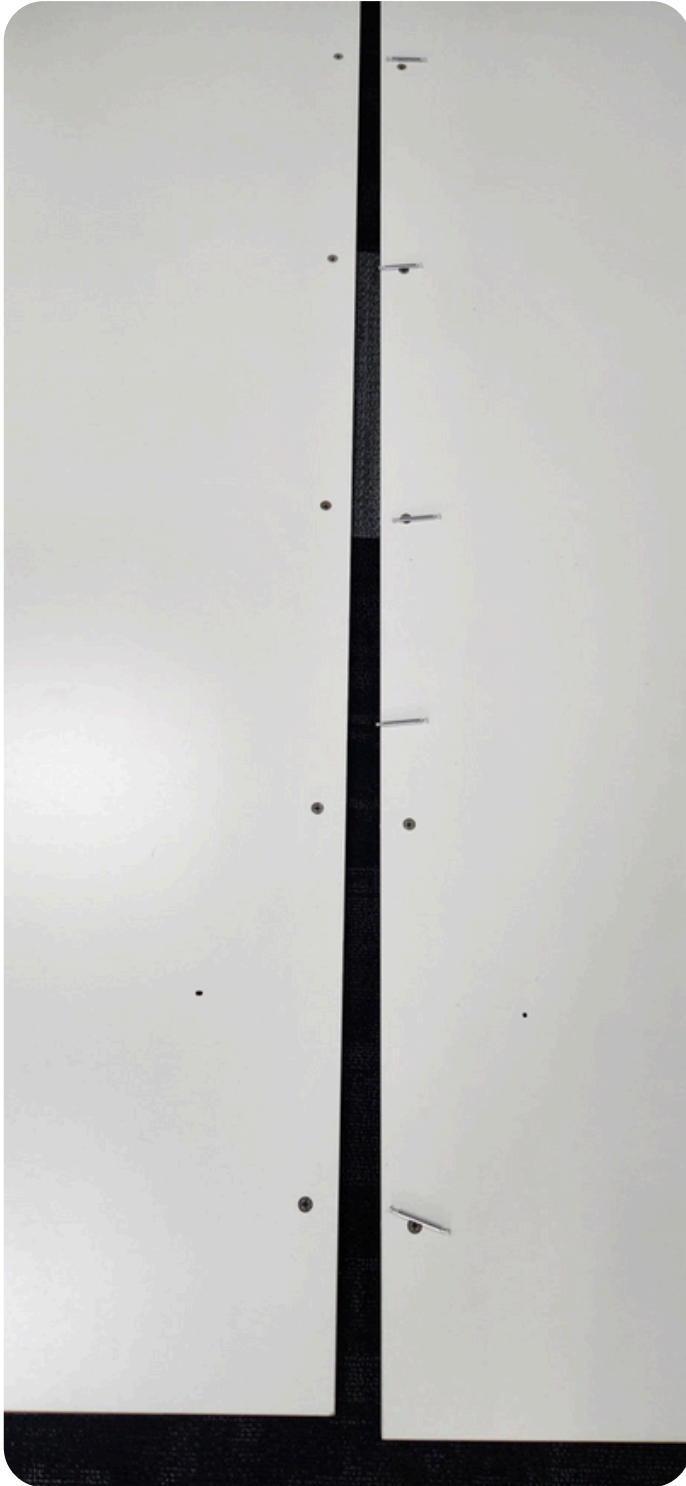

13. Assemble steel frame and fix to face panels



14. Corner bracket and fittings – foot end.



15. Note locating holes in each corner.



16. Mattress retainer strap fitted to foot end.




17. Bolts fitted at head end to take hinge arms.



18. Tension bar fitted.




19. Locking pin in place to receive face panels.

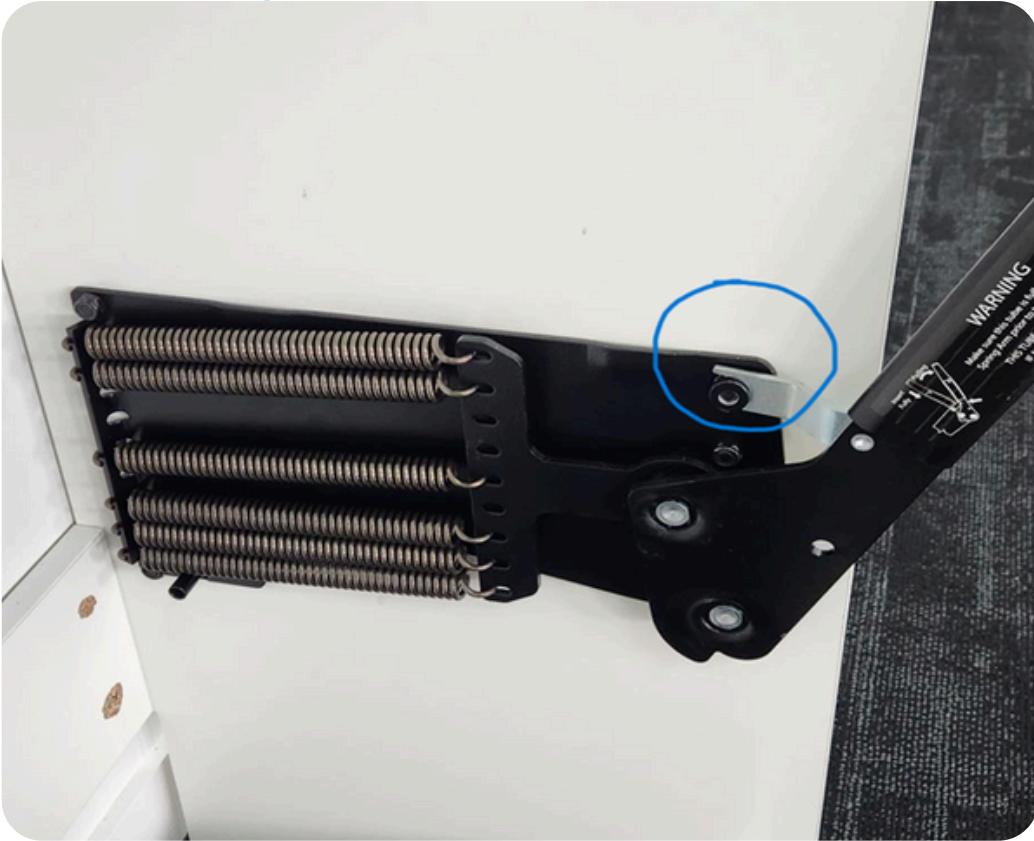

20.Face panel ready to be fitted to Carcase.



21. Face panels sitting on hinges ready to tighten up.

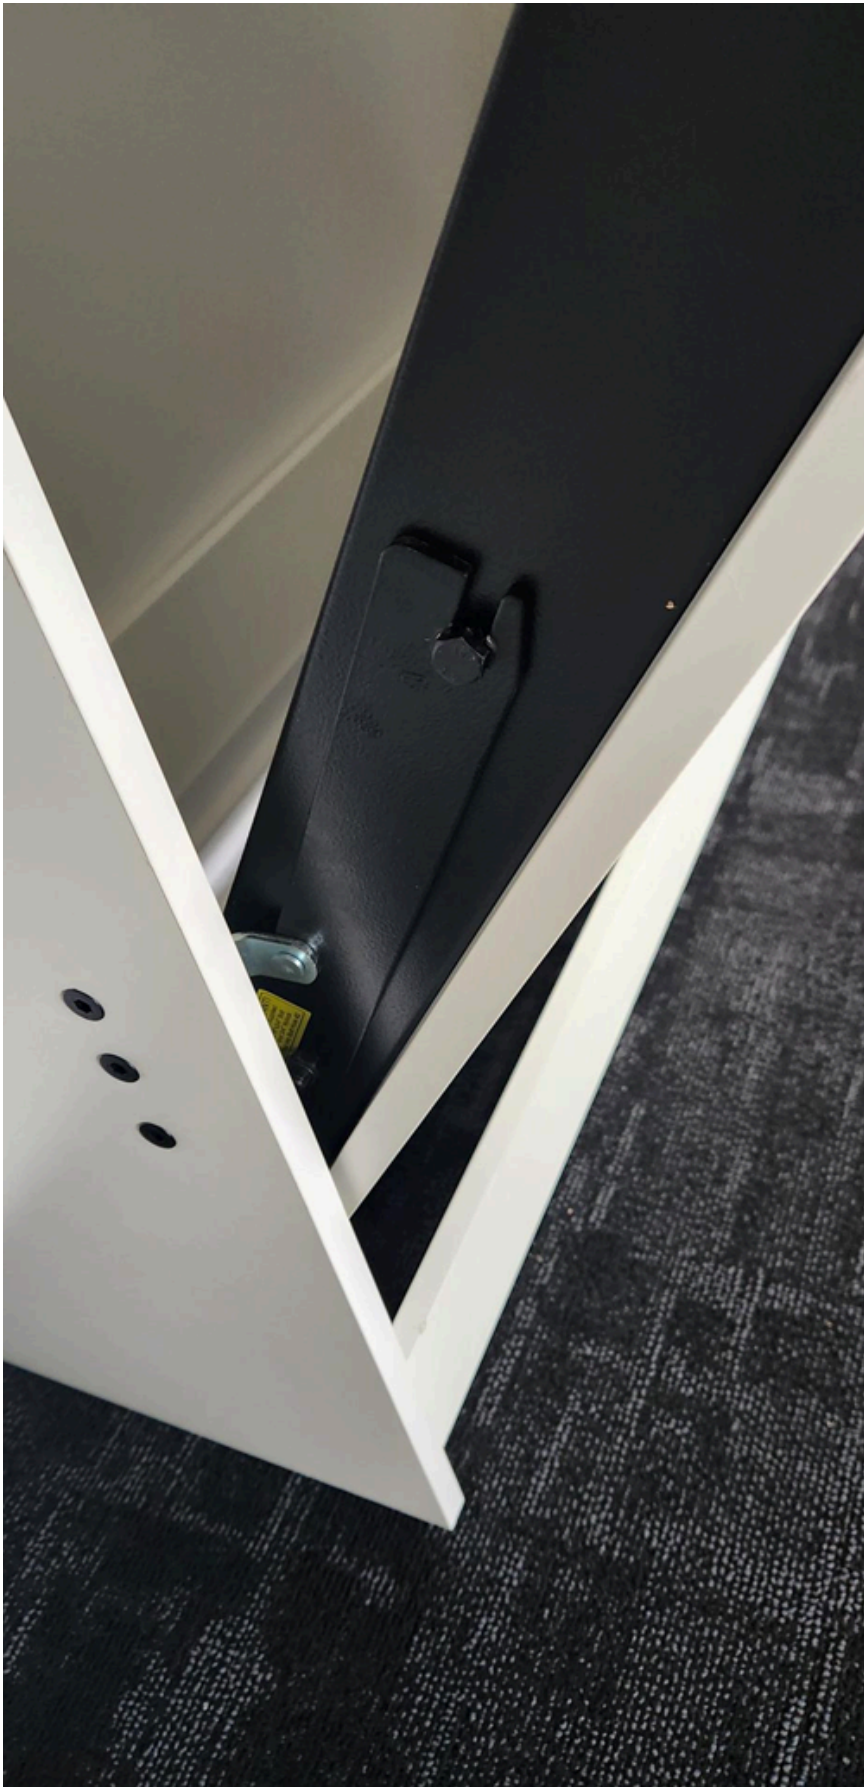

22. Spring cover fitted ready to screw on.



23. Congratulations! Your Hide-a-bed is now set-up and ready for use.
Enjoy!



Still need assistance?

If you need assistance, we suggest reaching out to installation professionals, such as the below:

- Hire-A Hubby: <https://www.hireahubby.co.nz/contact/>
- Kitset Assembly Services: <https://www.kitsetassemblyservices.com/franchise-nz/>

Please note, Mazon Group does not take any responsibility for any installation service costs.

